


# Extreme Pod Instructions

## To Install:

Loosen attachment knob wide enough to slip over the picatinny rail on the rifle. Once placed onto the rail, tighten firmly. Note: logo on the bipod body should be facing away from shooter. (See pictures 1 & 2)

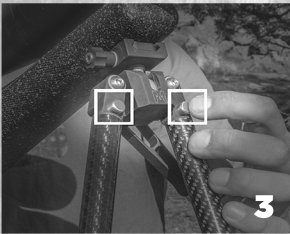

## Functions:

With the tension handle tight, take the detent, and spread the legs apart, legs should lock into detent. (See picture 3)



To adjust each leg, loosen the compression collar and adjust legs the desired height, then retighten. (See picture 4)

To cant the rifle one way or the other, loosen the tensioner handle while legs are in position, move until desired level angle, and retighten. (See picture 5)



## Shooting At Steep Angles:

The extreme pod can adjust up and down 90 degrees.

If you encounter a shot at a steep downhill angle. Loosen the tension handle, and simply raise the butt of your stock up and let the bipod rotate on the spherical ball with your rifle. Once in the correct position, tighten tensioner. (See picture 6)



If you encounter a shot at a steep uphill angle. Loosen the tension handle, rotate bipod so logo on the body is facing the shooter. Lower the butt of the rifle while letting the bipod rotate on the spherical ball. Once in the correct position, tighten tensioner. (See picture 7)

**INSTRUCTIONAL VIDEO:** <https://www.youtube.com/user/ExtremeOuterLimits/videos>